


KITCHENAID® TILT HEAD MIXERS (KA-TH)

1. Attach and **lock** mixing bowl, then attach BeaterBlade+.
2. Lower and **lock** mixing head. Test scraping action with soft butter...blades may skip when dry.
3. If needed, raise or lower mixing head by using height adjustment screw (**A**) to fine tune blade-to-bowl contact.
 - o Clockwise lowers BeaterBlade+ (1/8 turn at a time to increase contact)
 - o Counterclockwise raises BeaterBlade+ (1/8 turn at a time to decrease contact)
4. Add ingredients on the left side, facing the machine, aiming for the center of the bowl.
5. Always add flour slowly on **Stir**.
6. Never use sharp objects on BeaterBlade+.
7. If motor slows when adding flour, increase speed 1 level at a time.
8. Top Rack dishwasher safe...place on rung upside down. Use bottle brush to clean inside the neck.

** Never use sharp objects on the body or the blades **

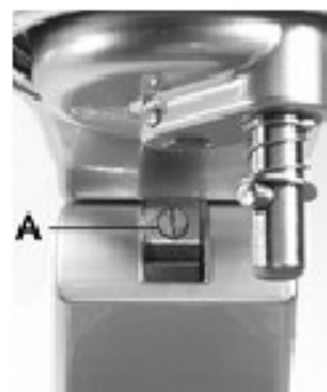

WARNING: BeaterBlade+ is not a toy. For your safety and to avoid the possibility of injury, use the BeaterBlade+ in accordance with these instructions and never place fingers, utensils or foreign objects into mixing bowl while operating mixer or bodily damage may occur. Be sure mixing bowl, tilt head or lift mechanisms are securely locked before use and that the mixer is used in accordance with its safety instructions.

1 YEAR GUARANTEE: NewMetro Design guarantees the construction and performance of this product for one year from the date of purchase. NewMetro Design shall replace any defective product with the same product if available; however, NewMetro Design reserves the right to replace with a substantially similar product in the event design or manufacturing modifications were made to the defective product returned. Misuse, abuse or cleaning with any solvents or in a manner, except as directed in the instructions, voids this one year guarantee.